NORELCO

REFLEXPLUS 6
SHAVING SYSTEM

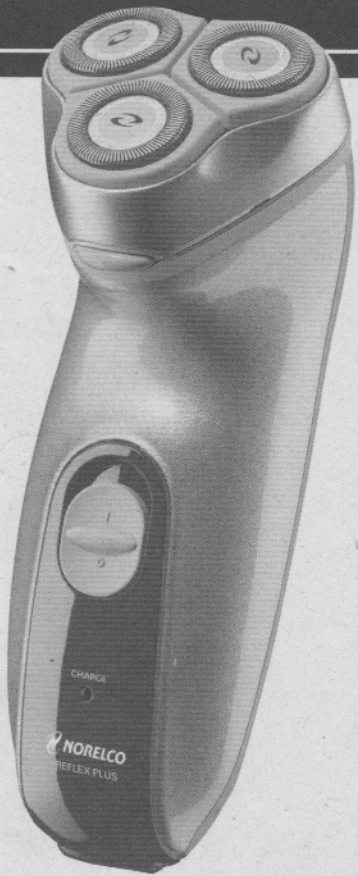

6618X
6616X
6615X
6614X
6613X

Rechargeable Cordless Razor

PHILIPS

IMPORTANT SAFETY INSTRUCTIONS

When using an electric razor, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a razor that has fallen into water. Unplug immediately.
2. Do not use razor while bathing or in a shower.
3. Do not place or store razor where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this razor from the electrical outlet immediately after using, except when razor is recharging.
5. Unplug this razor before cleaning.
6. When **discarding** razor, unplug razor and remove rechargeable battery.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this razor is used by, on, or near children or invalids.
2. Use this razor for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this razor if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the razor to an Authorized Norelco Service Location for examination and repair.

4. Keep the razor and cord away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not charge or plug in razor outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this razor with a damaged or broken comb, as facial injury may occur.
8. Always attach plug to razor first, then to outlet. Be certain that plug is inserted firmly into razor, up to mark indicated on plug. To disconnect, turn razor off then remove plug from outlet.
9. To prevent possible damage to the cord, do not wrap cord around the razor.
10. Never put razor in direct sunlight or store in a pouch at a temperature above 140°F.

SAVE THESE INSTRUCTIONS

IMPORTANT

YOUR RAZOR CONTAINS A NICKEL-CADMIUM RECHARGEABLE BATTERY. See Battery Removal instruction sheet.

NORELCO

60 - DAY MONEY-BACK GUARANTEE

To enjoy the closest and most comfortable shave from your new Norelco Men's Razor, the razor should be used exclusively for 3 weeks. This allows your hair and skin enough time to adapt to the Norelco Shaving System. If, after that period of time, you are not fully satisfied with your Norelco Men's Razor, send the product back and we'll refund you the full purchase price.
The razor must be shipped prepaid by insured mail, insurance prepaid, and have the sales slip, indicating purchase price and the date of purchase, enclosed. The razor must be postmarked no later than 60 days after the date of purchase. Norelco reserves the right to verify the purchase price of the razor and limit refunds not to exceed suggested retail price.

Send dated sales slip, your complete name and address as indicated below, and the razor, prepaid to:

Norelco Consumer Products Company
A Division of Philips Electronics North America Corporation
450 North Medinah Road, Dock 16
Roselle, IL 60172-2329

Please allow 4-6 weeks for delivery of check. (Please Print)

Name_____
Address_____
City_____
State_____Zip_____
Daytime Telephone No. (AREA CODE)_____
Email Address_____
REASON FOR RETURNING:_____
_____
_____
_____
_____
_____
_____

Table of Contents

Features....8-9
LED Charge Indicator....10
Charging....10
Put It To The Test & Shaving Tips....11
How To Shave With An Electric Razor....12
Trimming....13
Cleaning....13-16
Assistance....17
Accessories....17
Battery Removal....18
Warranty....19
Spanish....20

Features

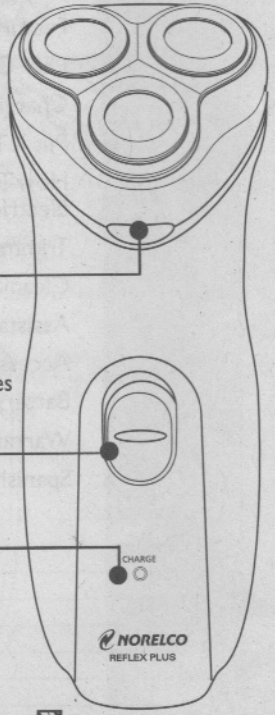

Reflex Plus Shaving System

Razor Head Assembly

Protective Razor Head Cap

Individually Floating Heads

Razor Head Release Button
- Hair Chamber captures shaven hair

Locking ON/OFF Switch

LED Charge Indicator Light

Built-in Charger

How the unique Norelco Lift and Cut® Shaving System Makes Close Comfortable:

Groove channels beard closer to cutting system | Lifter raises hair | Blade cuts hair which then drops below skin level

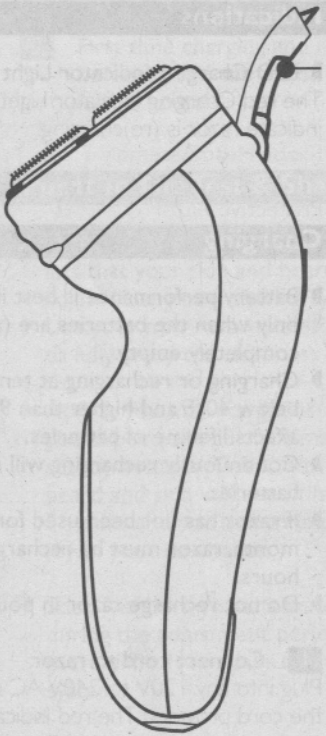

Full Width Pop-Up Trimmer

Automatic Worldwide Voltage 100V to 240V AC

Cleaning Brush

Travel/Storage Pouch

Rechargeable - Initial 16 hour full charge for up to 30 minutes of cordless shave time

Cordless - To shave without a cord

Full 2-Year Warranty

60-Day Money-Back Guarantee

Indications

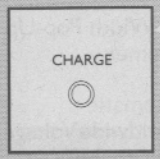

- LED Charging Indicator Light

The red Charging Indicator Light will light up to indicate razor is (re)charging.

Charging

- Battery performance is best if you recharge only when the batteries are (almost) completely empty.
- Charging or recharging at temperatures below 40°F and higher than 95°F adversely affects lifetime of batteries.
- Continuously recharging will reduce life of batteries.
- If razor has not been used for at least 1 month, razor must be recharged for a full 16 hours.
- Do not recharge razor in pouch.

1 Connect cord to razor.

Plug into any 120V to 240V AC outlet. Use only the cord provided. The red Indicator Light lights up to indicate razor is (re)charging.

- An adaptor plug may be necessary for cord charging in some foreign countries. Use an attachment plug adaptor of the proper configuration for power outlet.

Your new razor will automatically convert internally to work on 100V to 240V AC systems.

2 First time charging and recharging after non-use for 1 month or more requires a full 16 hours.

Put It To The Test & Shaving Tips

- 21 Day Trial and Conversion Process. It is a fact that your skin and beard need time to adjust to any new shaving system.
- Use your new razor exclusively for 3 weeks to fully enjoy the closeness of a Norelco shave.
- At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new razor.
- Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Norelco shaving system.
- If you are not convinced after 21 days, Norelco will refund you the full purchase price, guaranteed.

How To Shave With An Electric Razor

- Use this razor for its intended household use as described in this manual.
- Shaving with a clean, dry face gives the best results.

1. Turn razor to ON (I) position. Shave against the direction of beard growth using both straight and circular movements.

2. Stretch your skin with your free hand so blades can lift and cut whiskers. Gently press razor to skin, so the floating heads can follow the contours of your face. DO NOT press too hard. Too much pressure can pinch the skin into the heads.

3. Turn razor to OFF (O) position.

4. Put the protective razor head cap on the razor to protect razor heads.

Replace your Norelco Reflex Plus razor heads (model # HQ55 PLUS) once a year for optimal shaving results.

Trimming

To groom sideburns and moustache:

1. Turn razor to ON (I) position.

2. Push up Trimmer Slide Switch.

The Trimmer can be activated while the razor is running.

3. Hold Trimmer as shown and move in downward strokes with gentle pressure.

4. Close Trimmer by sliding Trimmer switch down.

5. Turn razor to OFF (O) position.

Cleaning

Once a week: Razor

- Regular cleaning guarantees better shaving results.

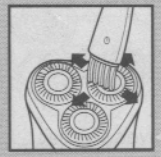

Always turn razor off, unplug from outlet and remove cord from razor before cleaning.

1. Clean the top of the razor with the supplied brush.

2. Press the Razor Head Release Button and remove Razor Head Assembly from the razor unit.

3 Brush out hairs from the inside of Razor Head Assembly and hair chamber.

4 Replace the Razor Head Assembly back on razor.

Every Two Months: Razor Heads

Do not mix up the cutters and combs as the shaving performance may be adversely affected for several weeks before optimal shaving performance is restored.

1 Turn razor to OFF (O) position and disconnect from outlet.

2 Press the Razor Head Release Button and remove Razor Head Assembly from the razor unit.

3 Brush the inside of the razor housing.

4 Turn Razor Head Assembly over so that underside is exposed.

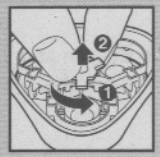

5 Turn wheel of frame counterclockwise.

6 Remove the frame and brush clean.

7 Remove and clean one cutter and comb at a time.

Do not clean more than one cutter and comb at a time, since they are all matching sets. If you accidentally interchange the cutters and combs, it could take several weeks before optimal shaving performance is restored.

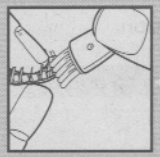

8 Separate the cutter from the comb.

9 Only brush the cutter in an upward motion. Use the short bristled side of the brush.

10 Brush the slots of the comb.

For optimum performance, razor cutters and combs should be cleaned in a degreasing liquid (e.g. Norelco Razor Head Cleaner, model RC1776 or alcohol) and lubricated with Norelco Razor Lubricant, model AL80, or one drop of mineral oil (in the center of the head). This helps prevent wear of the shaving heads.

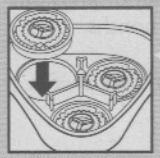

11 Replace the cutter and comb into the Razor Head Assembly.

12 Repeat the process for the other two sets of cutters and combs.

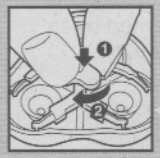

13 Replace the frame.

14 Turn the wheel clockwise until it locks into place.

15 Replace the Razor Head Assembly back on razor.

16 Put the protective razor head cap on the razor to protect heads.

After Each Use: Trimmer

1 Turn razor to OFF (O) position.

2 Push Trimmer Slide Switch up to pop up Trimmer.

3 Clean Trimmer with the brush every time you used it.

4 Lubricate the Trimmer teeth with Norelco Razor Lubricant (model AL80) or with one drop of mineral oil every 6 months.

5 Close Trimmer by sliding Trimmer switch down.

This razor has no other user-serviceable parts. Any other service should be performed by an Authorized Norelco Service Location.

ASSISTANCE

- For assistance or the Authorized Norelco Service Location nearest you, call toll free:

  1-800-243-3050
  or visit our website: www.norelco.com

- Authorized Norelco Service Location information is available 24 hours a day, 7 days a week.

ACCESSORIES

- NOTE: Model HQ5 Reflex Action Replacement Heads **DO NOT** fit this razor.

- Replacement Heads
  Model HQ55 PLUS - For maximum razor performance, replace your Norelco Reflex Plus razor heads once a year.

- Razor Head Cleaner
  RC1776 - Norelco Razor Cleaner

- Razor Lubricant
  AL80 - Norelco Razor Lubricant

- Norelco Razor Accessories may be purchased at a store near you, an Authorized Norelco Service Location, on our website www.norelco.com or by using the order form enclosed.

Battery Removal

- This Norelco Razor contains Nickel-Cadmium battery, which must be disposed of properly.
- Batteries should only be removed when razor is to be discarded.
- Refer to Battery Removal instruction sheet for directions on removing the rechargeable batteries.

FULL TWO YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Norelco Product, Model 6618X, 6616X, 6615X, 6614X, 6613X (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.* Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE. NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply take or ship the product postage prepaid to the nearest Authorized Norelco Service Location. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

* Read enclosed instructions carefully.

Manufactured for:
Norelco Consumer Products Company
A Division of Philips Electronics North America Corporation
1010 Washington Blvd., Stamford, CT 06912-0015

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco, Lift and Cut, and are Registered Trademarks of Philips Electronics North America Corporation.

and Reflex Plus are Trademarks of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips Electronics N.V.

© 2003 Philips Electronics North America Corporation. All Rights Reserved.

NORELCO

ULTRA CLOSE, ULTRA COMFORTABLE ... GUARANTEED!

NORELCO

FOR MAXIMUM RAZOR PERFORMANCE . . .

Replacing your Reflex PLUS Razor Heads once a year will keep the close comfortable shaves going!

Finding replacement heads couldn't be easier!

RETAIL

Call 1-800-243-3050 to find the retail location or Authorized Norelco Service Location nearest you or log on to our website at www.norelco.com

INTERNET

Visit www.norelco.com/shop to order from a secure website

PHONE

Call 1-800-243-3050 to order replacement heads direct

MAIL

Mail this order form with check, money order payable to "SureSource", or credit card information to:
Norelco In-Pack Offer
P.O. Box 884
20 Constitution Blvd. South
Shelton, CT 06485-0884
(no cash or C.O.D.'s please)

PHILIPS

4222 002 42652

NORELCO

ORDER FORM

SURESOURCE

An Authorized Norelco Distributor

For maximum razor performance, replace your Norelco razor heads once a year.

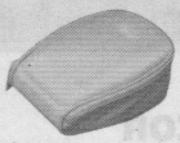

HQ55 PLUS Norelco Reflex PLUS Razor Replacement Heads.
3 Cutters and 3 combs. Fits Norelco Reflex PLUS, models only. Does not fit any other Norelco models. Does not fit Norelco Reflex Action® Models.

Free Razor Care Kit with Replacement Head purchase
or
Free AC Charge Cord with Replacement Head purchase

HC88 Norelco Deluxe Razor Pouch.
Fits Norelco Razor models only.

CC01 Norelco Reflex Plus and Reflex Action® AC Charge Cord. Fits Norelco Reflex PLUS, Reflex Action®, Micro Action®, Micro Action Plus, Double Action, Lift and Cut®, and Rotatract® models only. Does not fit any other Norelco models.

RK7680 Razor Care Kit.
Includes the RC1776 Razor Cleaner and AL80 Razor Lubricant.

Model	Description	Quantity	Price	Amount
HQ55 PLUS-K	Free Razor Care Kit with HQ55 Reflex Plus Razor Repl. Heads Purchase		$32.95	
HQ55 PLUS-AL	Free AC Charge Cord with HQ55 Reflex Plus Razor Repl. Heads Purchase		$32.95	
RK7680	Razor Care Kit		$12.95	
HC88	Deluxe Razor Pouch		$9.95	
CC01	Reflex Action® Razor AC Charge Cord		$9.95	
			Subtotal	
			Sales Tax*	
			S&H	$5.00
			TOTAL	

We ship by UPS to continental U.S.A. addresses only. Please allow 3-4 weeks for delivery. Prices subject to change without prior notice. Norelco reserves the right to limit quantities.

*6% sales tax applies to CT residents only.

PLEASE PRINT CLEARLY Date:_____

Name: _____

Address: _____
Street address only - Please do not use P.O. Box)

City: _____ State:_____ Zip:_____

Daytime Phone No. (____) _____ Email Address_____
In case there is a question concerning your order

❒ **Check or Money Order (Payable to "SureSource") Enclosed**

Credit Card Information: Card Expires: Month _____ Year _____

❒ Visa ❒ MasterCard ❒ American Express ❒ Discover Card

Card No.: _____

_____
Signature (Required for all credit card orders)

RBBHQ55 - 1/03

NORELCO

Ultra Close, Ultra Comfortable ...Guaranteed!

NORELCO

RECYCLE RBRC Ni-Cd 1.800.822.8837

IMPORTANT BATTERY DISPOSAL INFORMATION

YOUR NORELCO RAZOR CONTAINS NICKEL-CADMIUM RECHARGEABLE BATTERY(IES) WHICH MUST BE RECYCLED OR DISPOSED OF PROPERLY.

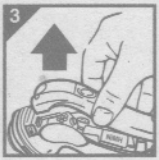

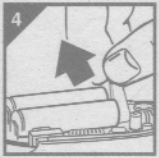

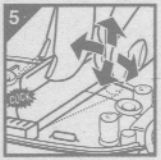

Your razor may look slightly different than this figure.

CAUTION:

- **Battery(ies) should be removed only when razor is to be discarded.**
- Make sure razor is unplugged before dismantling for battery removal.
- All servicing or battery replacement should be performed by an Authorized Norelco Service Location.
- For assistance or the Authorized Norelco Service Location nearest you, call toll free: **1-800-243-3050 or visit our website: www.norelco.com**

HOW TO REMOVE RECHARGEABLE BATTERY(IES):

1. Be certain razor is **OFF** and unplugged from outlet before dismantling. Allow the razor to run until the battery(ies) are completely empty/depleted. Turn razor OFF.
2. Depending on the razor model, unscrew the 2 or 4 recessed screws in the back of the razor (Fig. 1).
   NOTE: On some models one screw may be located under the trimmer slide switch. You may use a narrow flat blade screwdriver or small Torx screwdriver.
3. Remove the back cover of the razor (Fig. 2).
4. Lift up the plastic clip between cells until it snaps off (Fig. 3).
5. Move the battery(ies) back and forth a few times to break the connector strips (Fig. 4).
6. Remove battery(ies). **Do not attempt to replace battery(ies). Insulate battery ends by covering with tape and/or place battery(ies) in a small plastic bag.**
7. Discard your razor. **Do not** attempt to plug in the razor after the battery(ies) have been removed.
8. Contact your local town or city officials for battery disposal information or call: 1-800-8-BATTERY or www.rbrc.com for battery drop-off location information.

4222 001 6883 4 Rota 03-05/03

PHILIPS